




POSITION INDICATOR

MAXIMUM CAPACITY
1160 KG



FIREFIGHTERS' OPERATION

 When flashing, exit elevator

To operate car: Insert the key and turn to "ON" / Press elevator floor button

To cancel floor selection: Press "CALL CANCEL" button

To close power-operated door: Press and hold "DOOR CLOSE" button

To open power-operated door: Press and hold "DOOR OPEN" button

To hold car at floor: With doors open, turn key to "HOLD"

To automatically send car to next floor: With doors open, turn key to "OFF"



IN CASE OF EMERGENCY
PRESS ALARM BUTTON
WAIT FOR ANSWER



HANDSFREE
TELEPHONE WITH
AUTO-DIALER

CAR
1





WWW.DELTA-ELEVATOR.COM

LIFT TYPE
PASSENGER ELEVATOR

TITLE
TYPICAL CAR STATION


DRAWING NO.	REV.	SHEET
FIXTURES	1	1 OF 2

SAMPLE HALL POSITION INDICATOR

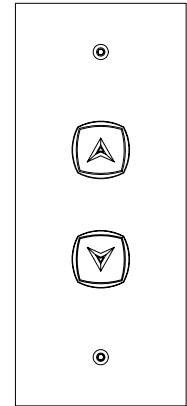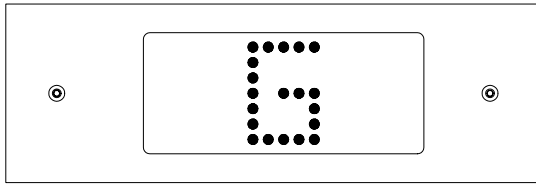


SAMPLE HALL STATION

 
DIGITAL HALL POSITION INDICATOR (IF PROVIDED)



HALL LANTERN (IF PROVIDED)

 

HALL STATION

 

HALL STATION 1067

HALL LANTERN 1829



WWW.DELTA-ELEVATOR.COM

LIFT TYPE
PASSENGER ELEVATOR

TITLE
TYPICAL HALL FIXTURES

DRAWING NO.
FIXTURES

REV.
1

SHEET
2 OF 2